

# Lotsofbabies Ltd

## *T3 Twin Jogger and Jockey seat*



### **Lotsofbabies Ltd**

58 Cavendish Road,  
Salford M7 4NQ  
United Kingdom  
0161 740 9979

[www.lotsofbabies.com](http://www.lotsofbabies.com)

PLEASE MAKE SURE ALL USERS OF THIS  
PUSHCHAIR ARE FAMILIAR WITH ITS OPERATION

**IMPORTANT KEEP FOR FUTURE REFERENCE**

## Initial set up



Attach the rear axle unit to the rear legs, push on until button locates in hole in moulding.



Push small axle through rear wheel locate in axle unit and push chrome cap until axle firmly locked.



Turn black swivel adjustment knob to the spot, then push in the swivel wheel unit.



## Opening Jogger



Lift the rear frame, pull the front and rear legs apart by lifting the back frame (to which the shopping basket is attached) Keep pulling up until 'elbows' lock.



Pull up the handle frame and lock with the two 'elephant ears'

## Backrest Adjustment



To release backrest, squeeze clip at rear, pull backrest down letting the strap slide through, release to lock in desired position.



To move backrest to upright position squeeze clip and pull strap whilst pushing backrest to desired position.

## Handle Adjustment



1 Press in outer buttons with both hands, push handle up or down (just a short way) and hold position (pressure)

2 Release right hand side (keeping the pressure on left side).

3 Press middle button, handle locks will now be released, adjust handle up or down to next lock position.



## Bumper Bar



Push bumper bars into slots. To release. Press in 'tongue' in bumper moulding and pull out of slot. If 'tongue' cannot be felt through fabric either go underneath fabric from outside of Jogger or pull fabric down around slot..



Adjust bumper position by pushing in red buttons.



**IMPORTANT** Use the red plastic stoppers in the moulding's when they are open and not being used by the jockey seat or the bumper bars. This is to avoid children getting their fingers stuck inside.

## Brake operation



Press outer end of red lever to operate brakes, and inner end to release

## Swivel Adjustment



Select swivel or lock as desired.

To remove swivel wheels turn knob to The spot press in and hold the white button, pull off wheel.



# Folding

- Remove jockey seat if fitted.
- Move bumper bars to fit flat against front of seat
- Push up backrests



The Jogger will fold to its smallest with its wheels removed. If the wheels are left on turn the large swivel wheel lock to 'swivel' so the wheels can be twisted

Twist the swivels in to save space



1

1 Pull out, from both sides, the 'elephant ears' above the top of the rear legs.



2

2 Pull up the red safety lock on the left hand side



3

3 Push the handle forward



4

4 Hold the rear leg extensions, lift up whilst; 5 pushing down on the rear bar above the rear axle and brake pedal, continuing pushing until the rear legs fold under the frame.

5



6

Lock the front frame and rear axle together using the strap attached to middle of the handle 6 and the straps on the side of the jogger. 7.

7



8

Twist swivel wheels to pack to smallest size. 8



# Harness Adjustment



1 DO NOT USE THIS PUSHCHAIR WITHOUT HARNESSING YOUR CHILD INTO THE SEAT. If the pushchair stops suddenly and your child is not strapped in he or she can easily be thrown out.



2 1 & 2 Put left hand clip on top of right hand.  
3 Hold together and push inside clasp until locked



3 Adjust slides on shoulder and waist straps to fit child snugly



## To release



To release, squeeze the top of the clips and the bottom of the clasp together, push in centre button then pull out clips.



Harness 'D' rings are fitted at the ends of each waist strap for the attachment of an additional harness complying with BS6684

## Jockey seat attachment

- 1 Open seat frame and slide front tubes into housing.
- 2 Push firmly until spring button locks.

DO NOT USE THIS SEAT WITHOUT HARNESSING YOUR CHILD INTO IT. If the pushchair stops suddenly and your child is not strapped in he or she can easily fall out.



Press in button on tube to release front legs.



Push and lock mouldings at end of tubes into the housing on the pushchair frame



To remove seat undo Front strap, then press in 'tongue'



Firmly fasten the strap at the front of the seat to the 'D' ring under the footplate.



Squeeze prongs to release harness



Push together to lock



Move slides to adjust length of straps



Harness 'D' rings are fitted at the ends of each waist strap for the attachment of an additional harness complying with BS6684

## Hoods and Rain Aprons



Middle bar

To fit hoods over twins seats, push pegs into housings on the middle bar and slide and lock the outer clips on the outside bars. Attach velcro straps.



Outer bar



To fit the fabric hood on the Jockey seat, pull away the fabric on the top arms and slide the peg into the housing.



Attach the fabric apron to the front of the twin, Not designed to be used with Jockey seat



Use the appropriate rain apron when the Jockey seat is attached.

Place the apron over the hoods (fit the fabric hood on the Jockey seat)

**Push the back part of the apron through the left side section of the handle** attach the various velcro strips to each other where they meet.



## Footmuffs ( purchased separately)



To thread the harness through the footmuffs, release the top of the harness strap. Unzip the back of the backrest cover. Twist the buckle and thread it back through the backrest and fabric. Thread through footmuff cutouts and refit through backrest slot.



For future reference please enter your invoice number, supplier and date of supply.

Invoice number .....

Supplier .....

Date of Supply.....

This pushchair is made from high quality materials and will provide excellent service. It is not though unbreakable, please use with care and be especially aware of the safety catch which must be released before folding. This pushchair and seat unit is guaranteed for 12 months from date of supply against faulty manufacture of workmanship. Please note this does not include fair wear and tear. Up to six months after purchase collection and re-delivery is included, from six to twelve months carriage charges are to be paid by purchaser. Free collection and return only applies to goods within the UK>

**Shopping baskets and bags are fitted. Do not overload, max weight in basket 4kg. Make sure all items are removed before folding buggy.**

### **SOME DO'S AND DON'TS**

The children should always use correctly fitted and adjusted safety harnesses.

Periodically inspect all joints and lap straps and harness attachment points. Do not leave the children unattended and always use the brakes when the triple buggy is stationary.

**Keep the tyres well inflated, it will be easier to use and reduce wear**

**It may be unsafe to use accessories e.g. bags, rain-covers etc other than those recommended by Lotsofbabies Ltd.**

**It may be unsafe to use replacement parts other than those supplied or approved by Lotsofbabies Ltd.**

Lotsofbabies Ltd 0161 740 9979 Manchester M7 4NQ

**WARNING: A CHILD'S SAFETY IS YOUR RESPONSIBILITY.** Children should be harnessed in at all times and should never be left unattended. The child should be clear of moving parts whilst making adjustments. This vehicle requires regular maintenance by the user. Overloading, incorrect folding and the use of non-approved accessories may damage or break this vehicle. Read the instructions.

This Pushchair conforms to BS7409 1996