

1 Keep for future reference. Log on to www.lotsofbabies.com for instruction videos

Lotsofbabies

Lotsofbabies Ltd

58 Cavendish Road,
Salford,
Greater Manchester
M7 4NQ
0161 740 9979

Instruction Leaflet

T3 and T4 Pushchair

WARNING

- Never leave your child unattended
- Ensure that all the locking devices are engaged before use.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Do not let your child play with this product.
- This product is not suitable for running or skating
- Use the most reclined backrest position for newborn babies
- **Tyres should be inflated to 26psi, check before first use and periodically**

Suitable for children up to 15kg. Rear seats suitable from birth when in fully reclined position.

Compatible with Lotsofbabies; Single toddler seat, Double toddler seat and the Newborn car seat carrier.

SAFETY INSTRUCTIONS

Engage the parking brake when placing and removing children

Do not overload the shopping basket, maximum 5kg

Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.

Regularly inspect straps and joints for wear and tear. Use WD40 on swivels, joints and points of contact. Wash fabrics with water and upholstery foam cleaners (test first for suitability) do not soak.

Only put the number of children in the pushchair that it is made to accommodate.


Do not use accessories that have not been approved by Lotsofbabies Ltd.



2 Keep for future reference. Log on to www.lotsofbabies.com for instruction videos

Only replacement parts supplied or recommended by Lotsofbabies Ltd shall be used.

INITIAL SET-UP

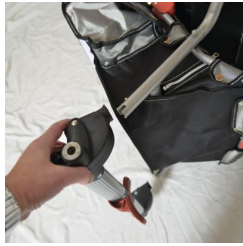

Attach the rear axle unit to the rear legs, push on until button locates in hole in moulding.



Push small axle through rear wheel. Locate in axle unit and push chrome cap until axle firmly locked. Remove rear wheels by pushing in chrome cap and pull unit out of rear frame.



Push the stem of the swivel frame into the housing.

OPENING THE PUSHCHAIR



MAKE SURE THE RED CLIPS ARE OPEN BEFORE PULLING THE HANDLE OVER. IF NOT DAMAGE WILL OCCUR.



DAMAGE WILL OCCUR IF CLIP IS LIKE THIS WHEN PUSHCHAIR IS OPENED.



3 Keep for future reference. Log on to www.lotsofbabies.com for instruction videos

Lift the rear frame, pull the front and rear legs apart. Lock the lower frame elbows. (to which the shopping basket is attached). Firmly lock the red clips

BACKREST ADJUSTMENT



To release backrest, squeeze clip at rear, pull backrest down letting the strap slide through, release to lock in desired position.



To move backrest to upright position squeeze clip and pull strap whilst pushing backrest to desired position.

HANDLE ADJUSTMENT



Press in outer buttons with both hands, push handle up or down (just a short way) and hold position (with slight pressure)

Release right hand side (keeping the pressure on left side).

Press middle button, handle locks will now be released, adjust handle up or down to next lock position.

BUMPER BARS



Push bumper bars into slots.

To release. Press in 'tongue' in bumper moulding and pull out of slot.

If 'tongue cannot be felt through fabric either go underneath fabric from outside of Pushchair or pull fabric down around slot.

Adjust bumper position by pushing in red buttons.

- 4 Keep for future reference. Log on to www.lotsofbabies.com for instruction videos



IMPORTANT Use the red plastic stoppers in the mouldings when they are not being used by an accessory. This is to avoid children getting their fingers stuck inside.

BRAKE OPERATION



Press outer end of red lever to operate brakes, and inner end to release

SWIVEL ADJUSTMENT



Turn black knob to select swivel or lock as desired. To remove swivel wheels turn knob to the (mid position) spot, press and hold the white button, then pull off wheel.

FOLDING

Remove the toddler seat if fitted. Move bumper bars to fit flat against front of seat Push up backrests. The pushchair will fold to its smallest with its wheels removed. If the wheels are left on turn the large black swivel wheel lock to 'swivel' so the wheels can be turned.

5 Keep for future reference. Log on to www.lotsofbabies.com for instruction videos



Push the small silver button in to release the locking catch.



Pull up the red safety lock on the left hand side and push the handle over.



Hold the rear leg extensions, lift up whilst; pushing down on the red pedal above the rear axle and brake pedal, continuing pushing until the rear legs fold under the frame.



Lock the front frame and rear axle together using the strap attached to middle of the handle (the safety strap) and/or the straps on the side of the jogger. Twist swivel wheels to pack to smallest size.

HARNESS ADJUSTMENT

DO NOT USE THIS PUSHCHAIR WITHOUT HARNESSING YOUR CHILD INTO THE SEAT. If the pushchair stops suddenly and your child is not strapped in he or she can easily be thrown out.



Put left hand clip on top of right. Hold together and push inside clasp until locked

- 6 Keep for future reference. Log on to www.lotsofbabies.com for instruction videos



To release, squeeze the top of the clips and the bottom of the clasp together, push in centre button then pull out clips.

SAFETY STRAP



Fasten the strap around the wrist to stop the pushchair 'running away'. Especially on hills.